
TASER 10 VR

QUICK START GUIDE

For detailed user guides, video walkthroughs, and training, go to https://my.axon.com/s/axon-vr-training (QR code above).

Simulated weapon


White TASER 10 VR Controllers are only for use in virtual reality (VR) training environments. They neither accept nor fire probes like a duty TASER 10.

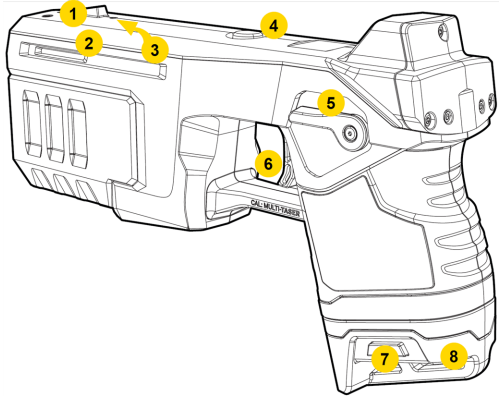

1. Front sight
2. Sidelight LED
3. Pairing LED
4. App button
5. Selector switch
6. Trigger
7. Battery release
8. Battery pack

Battery information

Battery packs are sold separately. The TASER 10 VR Controller (VRC) uses the same battery as a duty TASER 10.

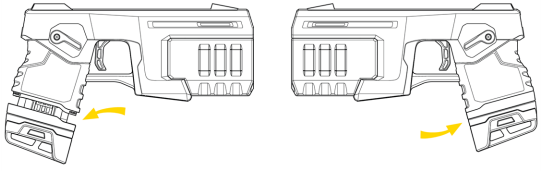


When the battery pack seats properly, the release buttons pop out from a recessed position with two audible clicks. The Sidelight LEDs flashes to indicate battery level: green (over 50%), yellow (50–15%), orange (14–5%), or red (<5%). A new battery requires an initial continuous 24-hour charge for proper setup.

The USB connector on the front is only for pairing the controller and headset if wireless pairing is unsuccessful. It's not for charging.

Selector switch and LEDs

Previous TASER devices had a two-position safety: On (Armed) and Off (Safe). The TASER 10 VRC selector switch has different operating modes:

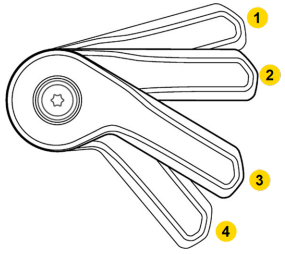

1. Tap up for re-energize (already deployed) or warning tone (not yet deployed)
2. On (Armed)
3. Off (Safe)
4. Hold down (not currently used for VR)

The Sidelight LEDs indicate what state the controller is in:

- If the controller is armed and you pull the trigger, the Sidelights is purple .
- If the controller is disarmed and you pull the trigger, the Sidelights is blue .

To conserve battery, the controller might enter sleep mode, indicated by all LEDs turning off. If this occurs while the device is armed, cycle the selector switch to Off (Safe) and then On (Armed) to reactivate it.


AXON

AXON, Axon, Axon VR, TASER, and TASER 10 are trademarks of Axon Enterprise, Inc., some of which are registered in the US and other countries. For more information, visit www.axon.com/legal. All other trademarks are property of their respective owners. All rights reserved. ©2026 Axon Enterprise, Inc., MPC0351 rev C, 12 Jun 2026

Magazine installation


The controller comes with the magazine already installed and there is no need to remove it. If it needs to be reinstalled:

1. Set the selector switch to Off (Safe).
2. Hold the magazine from the bottom and align the upper guides on the magazine with the rails on the device.
3. Slide the magazine approximately halfway toward the back of the device before pushing upward.
4. Slide the magazine into the TASER VRC until you hear a click.
5. Move the selector switch to On (Armed), then back to Off (Safe).

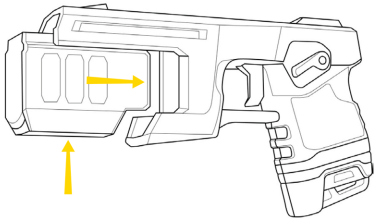

Pair the controller and headset

1. Turn the headset on by pressing the power button for about five seconds. It opens to the Library.
2. Select **Simulator Training** and acknowledge the messages.
3. Move or cycle the selector switch to On to wake up the TASER VRC. The Pairing LED turns blue (if green, it's already paired). Wait three seconds for internal systems to fully power on.
4. Press the App button firmly (so it clicks) until the Pairing LED starts flashing blue, or about three seconds.
5. When the controller and headset are paired, the Pairing LED turns green and Simulator Training launches.

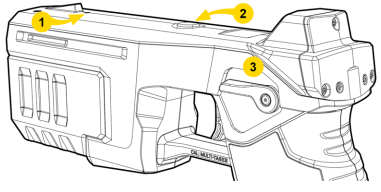

1. Pairing LED
2. App button
3. Selector switch up


The TASER VRC remains paired to the headset even if turned off or the battery is removed.

If pairing fails, the Pairing LED remains blue; cycle the selector switch off/on, wait three seconds, and retry step 4. Holding the App button too long puts the TASER VRC into Sleep mode.

When the Pairing LED is flashing blue and red, the TASER VRC is receiving a firmware update. Do not remove the battery.

Recharge the battery

1. Move the selector switch down to Off (Safe).
2. Press the buttons on each side of the battery pack and remove it from the TASER VRC.
3. Press the battery into the dock. It'll click when correctly seated.

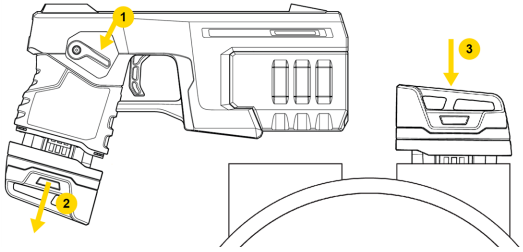

As the battery recharges in a networked dock, updates to your agency settings automatically download and will apply when the battery is used in the TASER VRC.